




item number: 481A96004




General Warnings

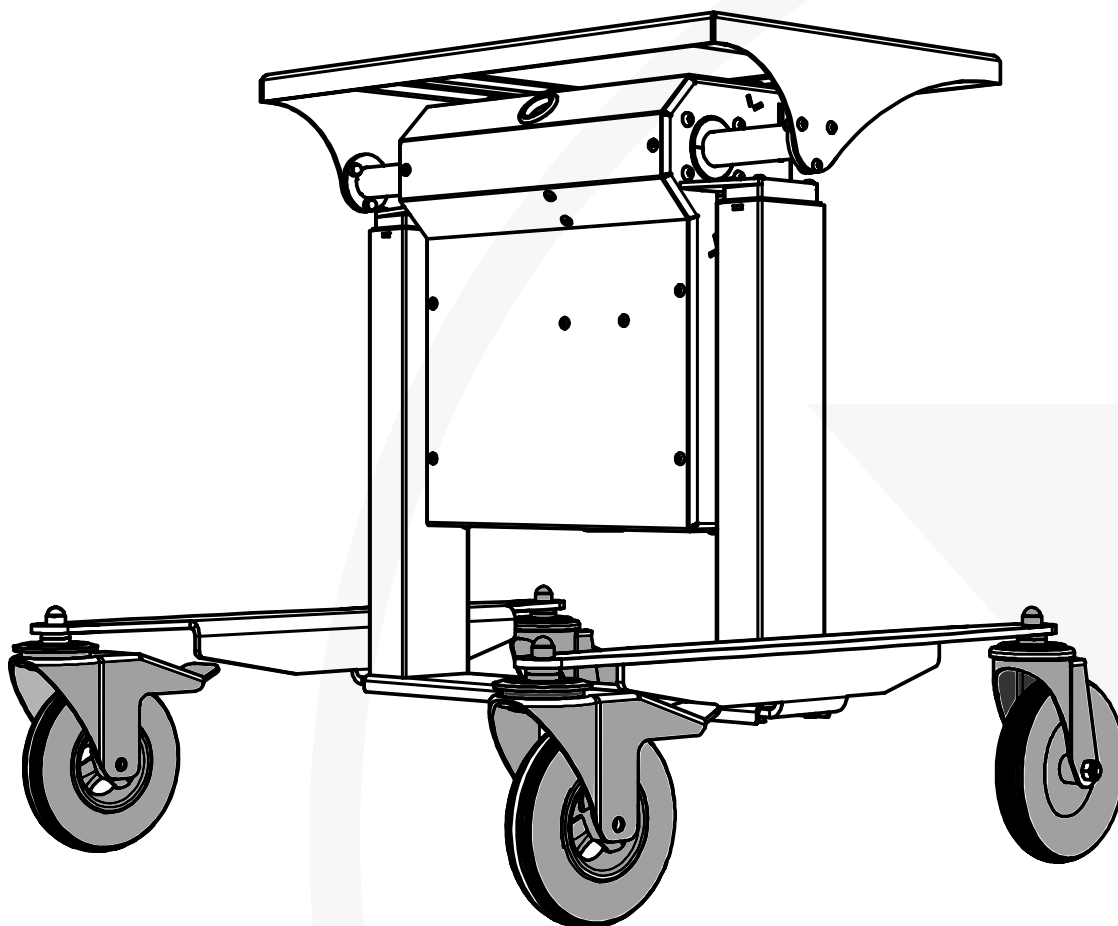

NOTE:
**BY MOUNTING THESE XL WHEELS THE STANDARD UL
REGISTRATION OF THE MOBILE STAND NO LONGER
APPLIES.**





**(Because of the bigger wheels stability on slopes will be
reduced, please be aware of this)**

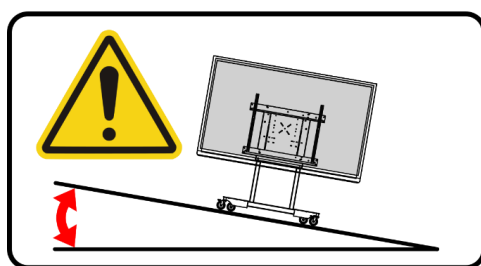


Tools



Content of the box

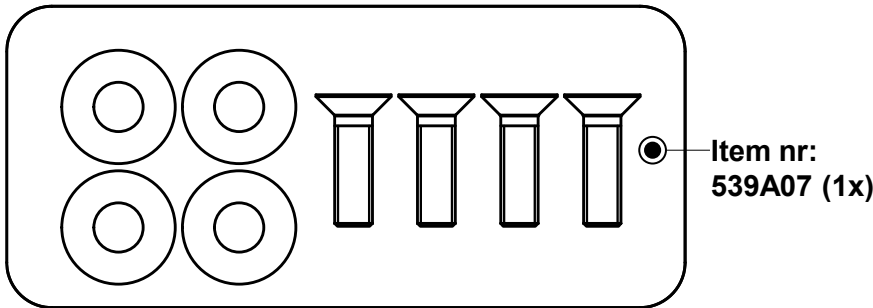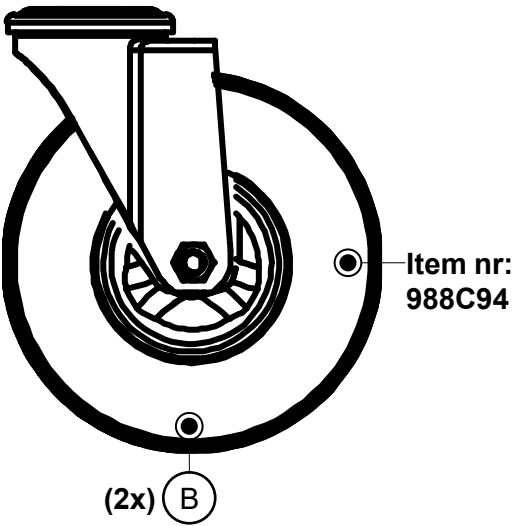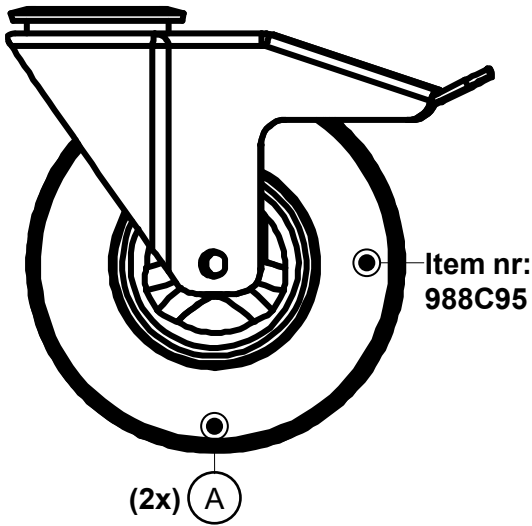


Contents of bag 539A07

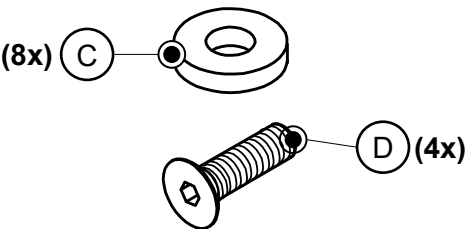


XL WHEELS FOR e-BOX TILT & TABLE

- 1 If the Tilt & Table is fully assembled: Support the base of the stand; if not go to step 2
Pull off and save the black plastic caps and undo the locknuts use a 17mm spanner and remove the 4 wheels

**SAVE!
DO NOT
THROW
AWAY!**


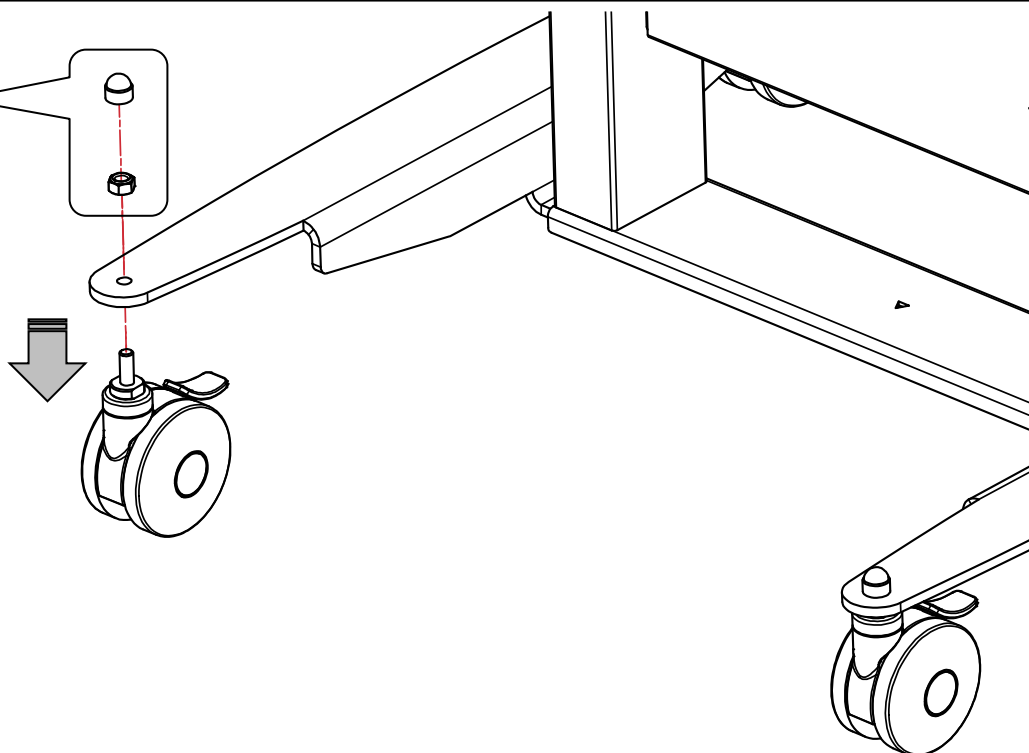


- 2 Insert a shoulder screw [C] in the XL wheel [A or B] from the bottom as shown


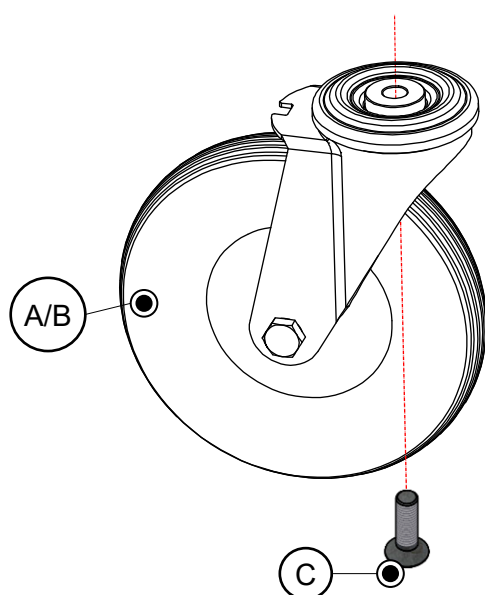


XL WHEELS FOR e-BOX TILT & TABLE

- 3** Add the 2 distance washers [D] and insert the shoulder screw [C] in the frame
Use a 17mm spanner and a 6mm allen key to tighten, use the locknuts saved in step 1 (supplied with the stand)

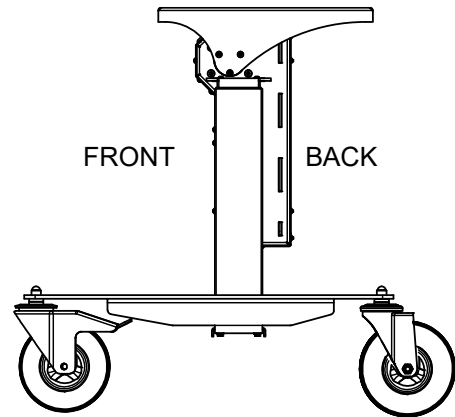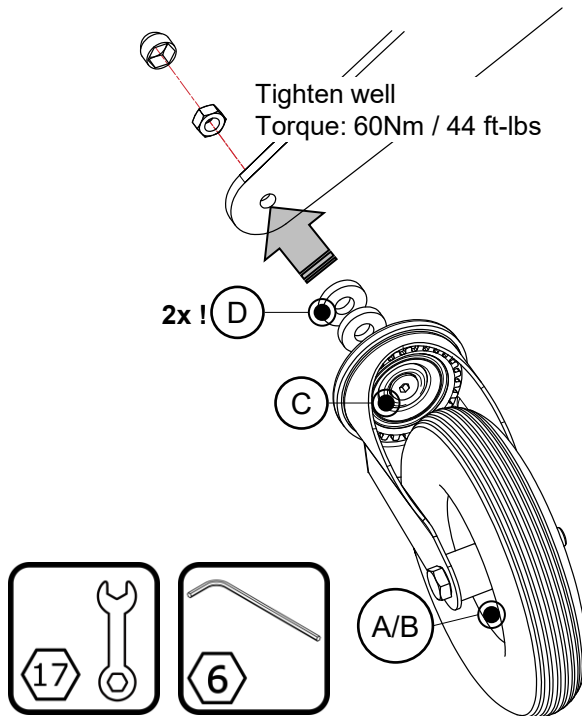

- 4** Put the black plastic caps saved in step 1 back on the locknuts

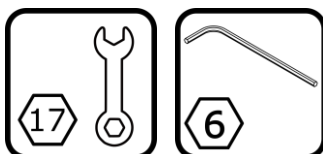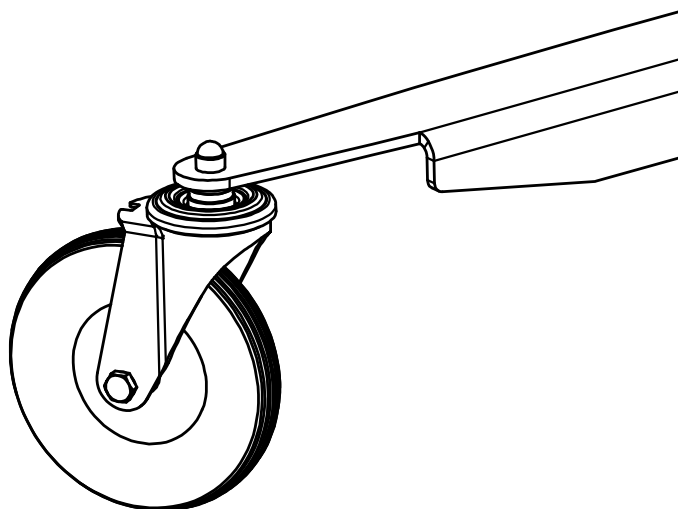



Instructions for use




1. Do not move the cart in the high position! Always lower the display before transport!
2. Do not place remote controls (of 3rd party) or toys on the mobile lift system!
3. Do not allow children under 16 to move the mobile lift system!
4. Do not pull, but push! Move slowly, always push towards the middle, never apply force at top!



1. Do not pull down slope!
2. Stay above cart when moving down a ramp!
3. Always stay above mobile lift system when moving down a slope!
4. Make sure the display is in the lowest position!
5. Do not raise the display with the lift system on a slope!



1. Maximum slope for moving the product:
 - 10 degrees
 - 1:5.6
 - 17,6%
2. Always place the e-Box® on a flat and horizontal surface!
3. Make sure the wheels are locked before use!

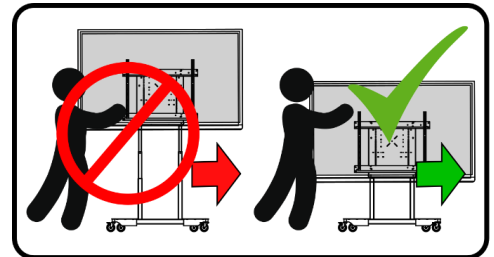


DO NOT MOVE CART IN HIGH POSITION

NE PAS DEPLACER LE CHARIOT EN POSITION HAUTE

NO MUEVA EL CARRO EN UNA POSICION ALTA

WAGEN NICHT IN OBERE POSITION FAHREN

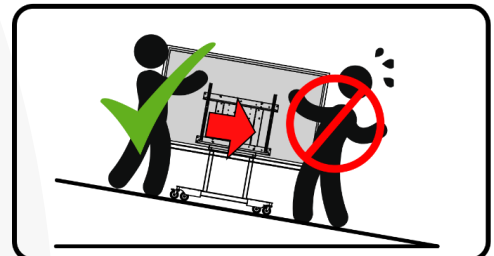


STAY ABOVE CART WHEN MOVING DOWN A RAMP

RESTEZ AU-DESSUS DU CHARIOT LORSQUE VOUS DESCENDEZ D'UNE RAMPE

MANTÉNGASE SOBRE EL CARRO CUANDO BAJE DE UNA RAMPA

BLEIBEN SIE ÜBER DEM WAGEN, WENN SIE EINE RAMPE HERUNTERFAHREN

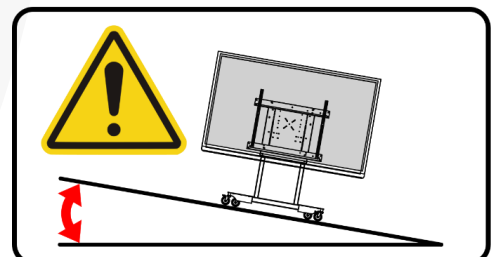

MAXIMUM SLOPE
10 DEGREE / 1:5.6 / 17.6%

PENTE MAXIMALE
10 DEGRÉS / 1:5.6 / 17,6%

PENDIENTE MÁXIMA
10 GRADOS / 1:5,6 / 17,6%

MAXIMALE STEIGUNG
10 GRAD / 1:5,6 / 17,6%